

S T O I M Y W Y Ż E J


wappex[®]

PRODUKCJA | MONTAŻ | SERWIS

INSTRUCTION

FOR OPERATION AND MAINTENANCE OF RAISED FLOOR WITH ACCESS MADE BY WAPPEX

TYPES: **W28BS-S, W38BS, W38BS-S, W38BS-P, W38BA, W38BA-A, W38BA-P**

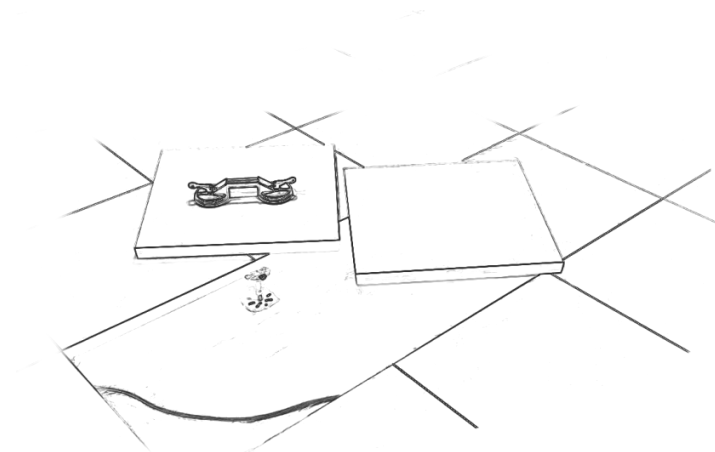

WAPPEX Sp. z o.o. Sp. k.
ul. Wspólna 1, 62-400 Słupca
tel. 600 907 306
www.wappex.com.pl, slupca@wappex.com.pl

Dear Sir or Madam,

To ensure proper and long-lasting functionality of Wappex raised floors, please read and follow the guidelines below

I. CLIMATE CONDITIONS

It is necessary to ensure constant temperature conditions and humidity during installation as well as after it:

- The temperature should be between **+5 ° C to +25 ° C**
- The relative air humidity should be **40% to 60%**

Terms exceeding these tolerances may result shrinkage or swelling of the floor panels and thus lead to bulging.

II. CLEANING AND MAINTENENCE

Cleaning the raised floor should be done regularly, be dependent on degree of soiling and the nature of the surface layer of the raised floor.

Cleaning od raised floors applied with hard or flexible coverings (i.e. PVC, linoleum, laminate, rubber, cork, stone, tiles, parquet) should be done by:

- sweeping or vacuuming dry
- wet wipe with a slightly moistened cloth or a well wrung mop adding a small amount of commercially available cleaner

Note: cleaning agents and preservatives selected according to each type of surface raised floor applications in accordance with the manufacturer's instructions , for example :

- Floor coverings of applied PVC antistatic agents- it is prohibited to use agents which can form an insulating coating (wax , acrylic, resin), they result in the loss of anti-static properties . It is proposed to apply to trade in areas such as cleanliness of the company : Dr. Schutz , Sele , Ole , Notrax ,
- Floor applied with stone: especially in areas not polished impregnation is recommended. Impregnation enhances the aesthetic qualities and the depth of color of the stone . It is proposed to use commercially available agents: " SARSIL " or " KERASTONE " from Federchemicals ,
- Floor applied with parquet, except mentioned cleaning do not require polishing products.

Cleaning of raised floors with carpet should be done only by "dry methods".

Cleaning of ventilation grilles, floorboxes and cable grommets should be done only by hand and by using "dry methods"


Attention!

In case of failure of the water system or spilling any liquids on the surface of raised floor, they must be removed immediately, and floor should left to dry.

III. GUIDELINESS FOR USE

OPENING AND CLOSING OF THE INSTALLATION

- Should be done according to following rules:
 - Lift only as many floor panels as is necessary
 - Use only specialized suction lifter (for floor panels without application or applied with PVC, cork, parquet, stoneware) or lift with special claws (for carpet)
 - Do not remove floor panel using forbidden tools (screwdrivers, chisels, etc.)
 - After using suction lifter take it off the floor panel immediately,
 - Removed the floor panel cannot be placed on the side,
 - While opening and closing floor panel opening never put your fingers into the gap under the plate.
- If the raised floor panels are removed to perform subsequent installation or access the underfloor surface, remember to:
 - Avoid creating islands of plates,
 - Take up max. three floor panels for one hatch - see Drawing No. 1,
 - Towards the open hatch floor should not be guided by any dynamic load. This rule does not apply to a variant of the supporting structure made of profile C40/40/2. In this case, even after removing all floor panels or a substantial part of them, a construction does not lose its mechanical properties.

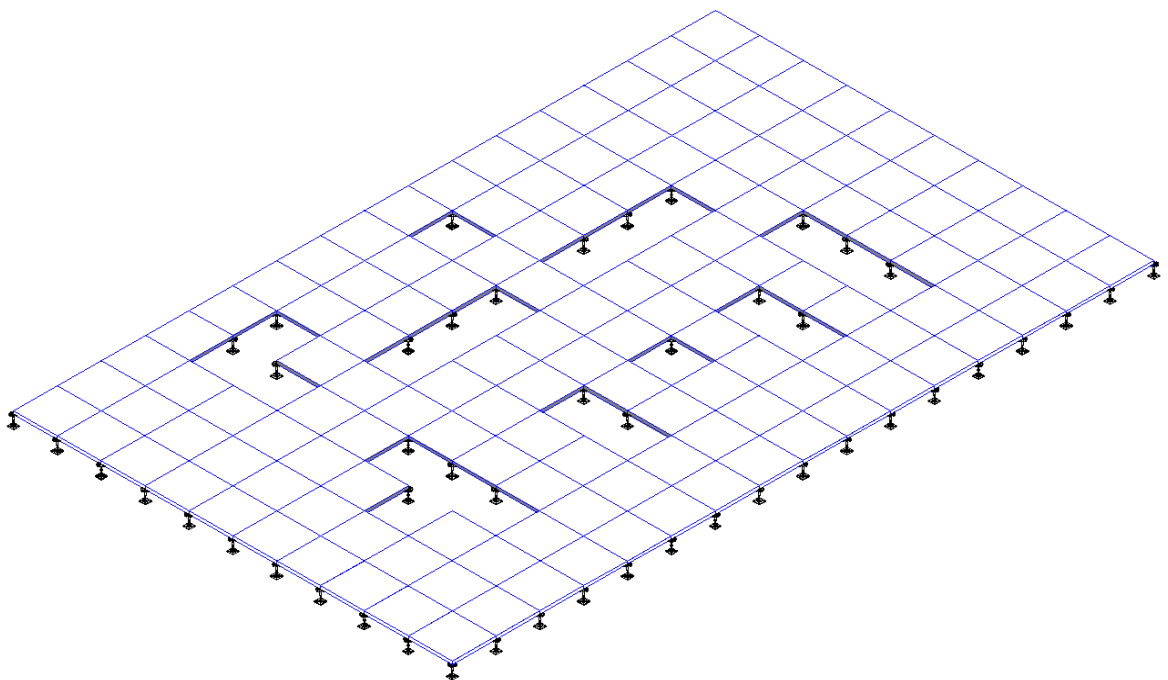


Drawing No. 1. The model proposal for opening a raised floor, having regard absence of the formation of islets.


- Dismantled plate should be placed on one side and their direction should not be changed
- Horizontal forces are permitted only as a minor component of the permissible load. The load data is related to the closed floor. Therefore, transport machinery cannot be done in direction of opened floor.

- **REMOVING FLOOR PANELS:**

Place the lifting tool on the center of floor panel side at a distance of about 5 cm from the edge (Drawing No.2); Gently lift the floor panel in order to loosen it, then place the lifting tool on the center of floor panel and lift it vertically. (Drawing No.3)

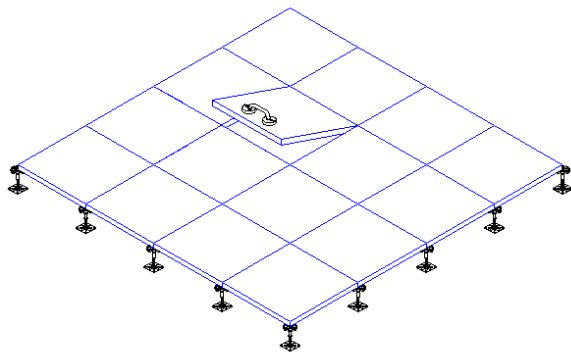

Drawing No. 2.

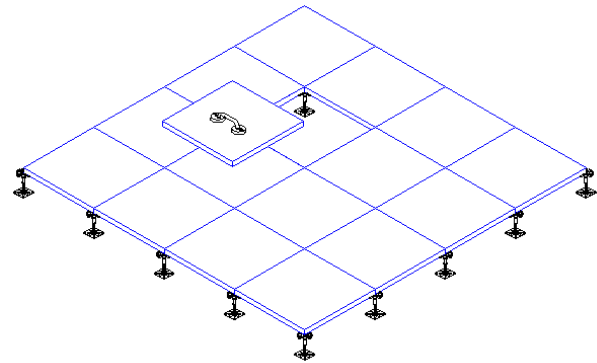

Drawing No. 3.

- **BEFORE REINSERTING FLOOR PANELS REMEMBER TO:**

- remove dirt from the head of the pedestal
- check if gaskets and supporting profiles are properly placed
- remember to keep the direction of the covering

- **INSERTING THE FLOOR PANEL**

Place the lifting tool on the one side of the floor panel, grab it from the bottom side, then place the floor panel on two supporting pedestals and gently move it to the adjacent panel and slowly lower it using the tool. (Drawing No. 2)

If in the case of the velour covering the first fleece of adjacent panel is stuck, by gentle lifting of this floor panel you can restore the correct original condition.

Plates removed after installation must be place on their original place, without turning.

In addition, make sure that placed panel is sited well, and then you can put the next one.

- **CAUTION**

Failure to comply with the above recommendations and any interference with installed raised floor system, consisting in a change, alteration, modification by unauthorized persons (not authorized by manufacturer) results in an immediate loss of warranty.

No warranty inspections / servicing of raised floors are required during warranty period.

If you have questions, please contact us at tel No. 63 275 10 07, 275 10 42, 275 10 77, 275 50 46
e-mail: slupca@wappex.com.pl

Thank you for purchasing our product!